

 
## T3 Programmable Thermostat Basic Operation (a guide for the User)

The T3 Thermostat controls your heating system using the programmed time/temperature schedule. It will continuously cycle the heating on and off throughout the day to maintain the scheduled temperatures - so hearing or seeing boiler activity indicates normal system behaviour.


### 1 AUTO Mode (normal daily use)

In AUTO mode the T3 will follow the scheduled time/temperature changes (see the full instructions for guidance on setting the heating schedule). During this mode **AUTO** will be outlined on the display.

While the T3 is idle the display shows only the current time and the actual room temperature. When you press the **+** or **-** button the target "set" temperature will be displayed instead of the time - showing you the temperature which the heating system is trying to achieve.

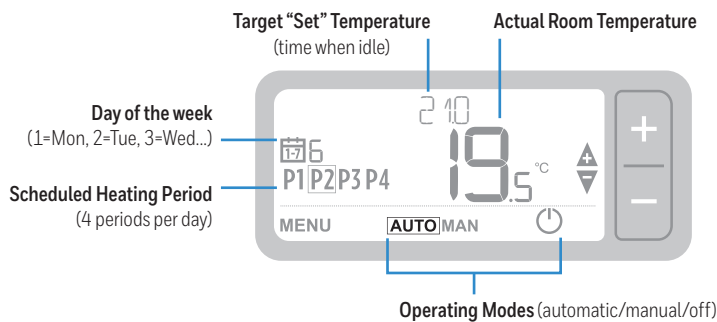

### 2 Temporary Override

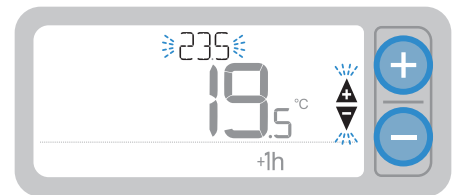


In AUTO mode you can adjust the target temperature until the next scheduled change by pressing **+** or **-** to set your preferred temperature (e.g. 23.5°C).

During a temporary override the T3 will not display the scheduled heating period.

At the next scheduled time/temperature change it will return to AUTO mode and the display will show the heating period again.

### 3 Timed Override (+1hr boost)

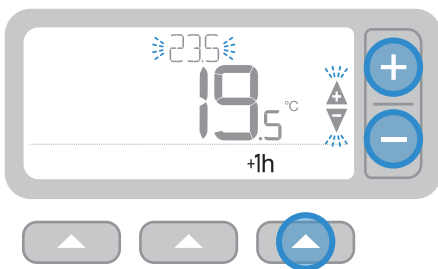


In AUTO mode you can boost your temperature for one hour to enjoy instant comfort or lower the temperature for one hour to save some energy.

Press **+** or **-** to set your preferred temperature and while the set temperature is blinking press the right button below **+1h** to set the timed override for one hour.

The T3 will maintain that temperature for one hour before returning to AUTO mode.

To cancel the timed override press the right button below **+1h** again.

### 4 MANUAL Mode

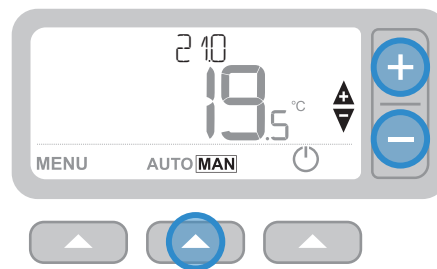


In MANUAL mode the T3 will follow a continuous set temperature (24hrs a day), until another operating mode (AUTO or OFF) is selected.

In AUTO mode, press the middle button to switch to MANUAL mode. During this mode **MAN** will be outlined on the display.

Press **+** or **-** to set your preferred target temperature.

Switching back to AUTO mode will return the T3 to following the programmed heating schedule.

### 5 Turning the Heating OFF

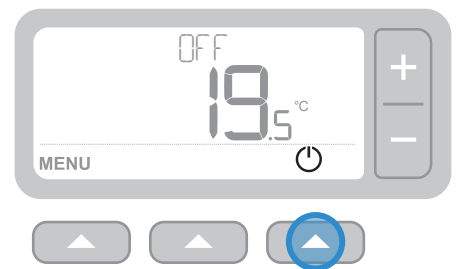


You can turn the heating off for long periods for example during warmer weather by pressing the right button below the OFF icon.

During OFF mode the T3 will be permanently set at 5°C (frost protection).

To return to normal operation press the right button below the OFF icon again.


## 6 What the T3 displays when the Boiler Service Reminder is active

### Service Reminder Alert

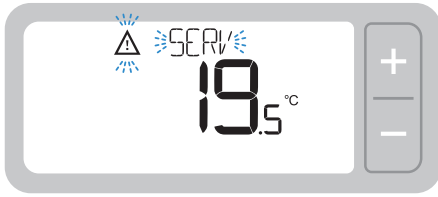


The initial alert period prior to the boiler service reminder timing out. During this alert period the T3 controls the heating as normal, but the word **SERV** will be shown on the display, prompting you to schedule a boiler service.

### Prompt mode (if enabled by the Installer)

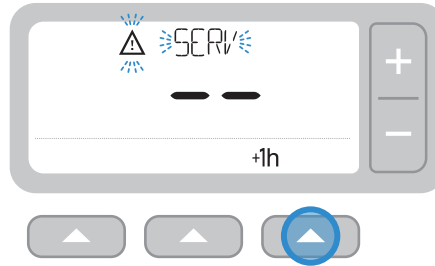

The service reminder alert period has timed out and the T3 has switched the heating off. You can enable the heating for one hour a set number of times by pressing the **+1h** button.

### Service Reminder Time Out

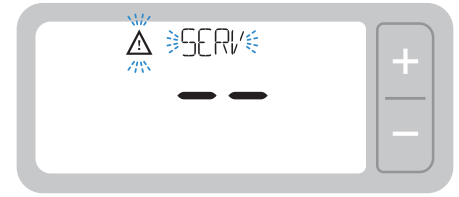

The service deadline has passed and the T3 has permanently switched the heating off until maintenance has been carried out.

**If you see any of the above screens please schedule a boiler service with the necessary contact**

**Contact**

**resideo**

Pittway Sarl, Z.A. La Pièce 4,  
1180 Rolle, Switzerland

[www.resideo.com](http://www.resideo.com)

© 2019 Resideo Technologies, Inc. This product is manufactured by Resideo and its affiliates. The Honeywell Home trademark is used under license from Honeywell International Inc. All rights reserved.



Online Guides



<http://hwllhome.co/eut-T3>